11410

INSTRUCTION MANUAL

REGULATED POWER SUPPLIES

MODELS LK-340 — LK-345

BEARING SERIAL NO.

PREFIX A

MP MASTER
MA28702

LAMBDA

LAMBDA ELECTRONICS CORP.–MELVILLE, L. I., N. Y.

PRELIMINARY

INSTRUCTION MANUAL

FOR

REGULATED POWER SUPPLIES

MODELS LK-340 — LK-345

BEARING SERIAL NO.

PREFIX A

This manual provides instructions intended for the operation of Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics Corp. All information contained herein applies to all metered and non-metered LK half-rack models unless otherwise specified.

LAMBDA ELECTRONICS CORP. MELVILLE, L. I., N. Y.
MAIN PLANT TELEPHONE: 516 MYrtle 4-4200

SPECIFICATIONS AND FEATURES

The following specifications apply for all non-metered and metered LK half-rack models.

DC OUTPUT--Voltage regulated for line and load

Voltage Range.....TABLE I

VOLTAGE RANGE

MODEL	340	341	342	343	344	345
VOLTAGE RANGE VDC	0-20	0-20	0-36	0-36	0-60	0-60

Multi-Current Ranges.....Current range must be chosen to suit the appropriate maximum ambient temperature. Current ratings apply for entire voltage range with input frequency 57-63 Hz. Derating for 50 Hz input frequency.

TABLE II

MODEL	CURRENT RANGE AT AMBIENT OF:			
	40°C	50°C	60°C	71°C
LK-340	0- 8.0A	0- 7.0A	0- 6.1A	0- 4.9A
LK-341	0-13.5A	0-11.0A	0-10.0A	0- 7.7A
LK-342	0- 5.2A	0- 5.0A	0- 4.5A	0- 3.7A
LK-343	0- 9.0A	0- 8.5A	0- 7.6A	0- 6.1A
LK-344	0- 4.0A	0- 3.5A	0- 3.0A	0- 2.5A
LK-345	0- 6.0A	0- 5.2A	0- 4.5A	0- 4.0A

REGULATED VOLTAGE OUTPUT

Regulation (line).....0.015 percent or 1.0 millivolt, whichever is greater for input variations from 105-132 or 132-105 volts AC

Regulation (load).....0.015 percent or 1.0 millivolt, whichever is greater for load variations from 0 to full load or full load to 0

Remote Programming

External Resistor.....Nominal 200 ohms/volt output

Programming Voltage.....One-to-one voltage change

Ripple and Noise.....0.5 millivolts rms with either positive or negative terminal grounded

Temperature Coefficient...Change in output voltage less than 0.015%/°C

DC OUTPUT--Current regulated for line and load; Automatic crossover with voltage limit

Multi-Current Ranges.....Current range must be chosen to suit the appropriate maximum ambient temperature. Current ratings apply for entire voltage range. For maximum current range see Table II. Minimum current 5% of 40° rating in Table II.

Voltage Range.....For voltage range see Table I; voltage ratings apply for entire current range.

REGULATED CURRENT OUTPUT; AUTOMATIC CROSSOVER

Regulation (line).....0.1% or 10 milliamperes, whichever is greater, for input variations from 105-132 or 132-105 volts AC

Regulation (load).....0.1% or 10 milliamperes, whichever is greater, for load voltage changes from 0 to rated VDC or rated VDC to 0 volts.

AC INPUT--105-132 volts AC at 57-63 Hz;

OVERLOAD PROTECTION

Thermal.....Thermostat, resets automatically when over-temperature condition is eliminated

Electrical

External Overload Protection...Adjustable, automatic, electronic current-limiting circuit, settable to 105 percent of rated current; limits output current to preset limit for protection of load and power supply when external overloads and short circuits occur

Internal.....

"SLO-BLO" fuse F1 protects the AC input circuit. Overload of the supply does not cause fuse failure.

"SLO-BLO" fuse F2 protects the load from excessive output current that can be caused by internal circuit failure.

MODEL	LK-340	LK-341	LK-342	LK-343	LK-344	LK-345
F1	10A	15A	10A	20A	15A	20A
F2	15A	30A	10A	20A	10A	15A

NPUT AND OUTPUT CONNECTIONS--Heavy duty terminal block on rear of chassis with 5-foot, 3-wire detachable line cord for all models.

PERATING AMBIENT TEMPERATURE RANGE AND DUTY CYCLE--Continuous duty from 0°C to 71°C ambient with corresponding load current ratings for all modes of operation

TORAGE TEMPERATURE- -55°C to +85°C
non-operating)

ETERS-Voltmeter and ammeter on metered suffix (FM) models

ONTROLS

DC output controls.....Coarse and fine voltage controls and coarse and fine current controls permit adjustment of DC output; located on front panel of all models

Remote Sensing.....Provision is made for remote sensing to eliminate effect of power output lead resistance on DC regulation

Power.....Panel mounted switch and indicator light for all units.

HYSICAL DATA

Size.....5-3/16"H x 8-3/8"W x 16-1/2"D

Weight..... 35 lbs. net; 41 lbs. shipping wt.

Panel Finish.....Brushed aluminum clear anodized panels with grey inlay (standard); special finishes available to customer's specifications at moderate surcharge.

OUNTING:

Laboratory bench, table top...Bumpers secured to the base of all LK models permit proper circulation of air through the unit. Removal of bumpers will restrict free-flow of air through the unit; avoid removing bumpers.

Standard 19" rack.....LK half-rack units; used with rack adapters:
LRA-1 (slide accomodation provided)
LRA-2 (conventional mount) See figure 11.

MODEL OPTIONS

Suffix "OV" Overvoltage Protection Option...All LK power supplies are available with a built-in overvoltage protection circuit which prevents damage to the load that can be caused by excessive power supply output voltage.

Suffix "R" Fungus Proofing Option...Standard LK power supplies can be obtained with fungus proofing treatment with MIL V 173 varnish for all fungi nutrient components

Suffix "FM" Meter Option..Standard LK power supplies can be obtained with voltmeter and ammeter

OPERATING INSTRUCTIONS

CONTROLS, INSTRUMENTS AND FUSES

ON-OFF Switch. The ON-OFF switch, located on the front panel, controls application of input power to the supply. When the switch is in the ON position, the red indicator glows.

OUTPUT VOLTAGE Control. The OUTPUT VOLTAGE control is a dual control consisting of a coarse adjustment potentiometer, which varies the DC voltage over a range 0-19, 0-35 or 0-59 volts,as applicable,and a fine adjustment potentiometer, which varies the DC voltage over a one-volt range. Clockwise rotation results in increasing voltage. The total DC voltage output for voltage regulated operation, is equal to the sum of each shaft setting; for current regulated operation the maximum voltage limit is equal to the sum of each shaft setting. The control is located on the front panel of all units.

CURRENT LIMITER Control. The CURRENT LIMITER control is a dual control consisting of a coarse adjustment potentiometer, which varies the DC current over 90% of the rated current range and a fine adjustment potentiometer, which varies the DC current over 10% of the rated current range. Clockwise rotation results in increasing current. The total DC current output for current regulated operation, is equal to the sum of each shaft setting; for voltage regulated operation the maximum current limit is equal to the sum of each shaft setting. The control is located on the fromt panel of all units.

Output Voltage Meter. A DC voltmeter monitors the voltage at the output terminals of metered (FM) units for the rated voltage range.

Output Current Meter. A DC ammeter monitors the load output current of metered (FM) units for the rated current range.

Fuses Fuse F1, internally located, is a 3AG "SLO-BLO" fuse which functions in the AC input circuit.

Fuse F2, internally located, is a 3AG "SLO-BLO" fuse which protects the load from excessive output current that can be caused by internal circuit failure.

NOTE: For fuse values see fuse chart in SPECIFICATIONS AND FEATURES

Connection Terminals. Make all connections to the supply at the terminal block on the rear of the supply. Apply input power through the line cord or directly to terminals 1 and 2 if the line cord is removed. Always connect the ungrounded (hot) power lead to terminal 1.

The supply positive terminal is brought out to terminal 6. The supply negative terminal is brought out to terminal 4. Recommended wiring of the power supply to the load and selection of wiring is shown in figures 1 through 8. Selection of proper wiring is made on the basis of load requirements. Make all performance checks and measurements of current or voltage at the rear output terminals. Connect measuring devices directly to terminals or use the shortest leads possible.

OV ADJ Control. This potentiometer is only used on units with the OV Overvoltage Protector option. The OV ADJ control permits screwdriver setting of the overvoltage protection point through an access hole in the front panel.

GROUND CONNECTIONS

The Lambda power supply can be operated either with negative or positive output terminal grounded or with no terminal grounded. Both positive and negative ground connections are shown in the diagrams for all suggested output connections illustrated in this manual.

NOTE: When operating the supply with neither terminal grounded, high impedance leakage resistance and capacitance paths can exist between the power supply circuitry and chassis ground.

BASIC MODES OF OPERATION

This power supply is designed to operate as a constant voltage source or as a constant current source. Automatic crossover to either mode of operation occurs when load conditions change as follows:

Constant Voltage. The power supply will function as a constant voltage

source while the load current does not equal the current value, I_{LIM}, set by the CURRENT LIMITER control. When load current $I_L = \frac{V}{R_L} = I_{LIM}$, the supply will cross over automatically and will operate as a constant current source. Further decrease in value of load resistance R_L results in decrease of voltage across the load while current remains regulated to I_{LIM}.

Constant Current (Automatic Crossover). The power supply will function as a constant current source while the load voltage V_L does not equal the voltage value set by the OUTPUT VOLTAGE control. When load voltage V_L equals the value set by the OUTPUT VOLTAGE control, the supply will automatically cross over and operate as a constant voltage source.

SUPPLY-LOAD CONNECTIONS

NOTE: Refer to DETAILED OPERATING PROCEDURES for step-by-step instructions for operation of power supply.

CONNECTIONS FOR OPERATION AS A CONSTANT VOLTAGE SOURCE

The regulation of the power supply at the load may change when using the supply as a constant voltage source and connecting leads of practical length are used. To minimize the effect of the output leads on this characteristic, remote sensing is used. Recommended types of supply-load connections with local or remote sensing are described in the following paragraphs.

Refer to figure 1 to determine voltage drop for particular cable length, wire size and current conditions. Lead lengths must be measured from supply terminals to load terminals as shown in figure 2.

Two-Wire Connection, Figure 3. The two-wire connection with remote sensing, provides complete compensation for the DC voltage drops in the connecting cables. Compensation for lead drop is also valid for gradual changes of load current.

Four-Wire Connection, Figure 4. The four-wire connection with remote sensing, provides complete compensation for the DC voltage drops in the connecting cables. Compensation for lead drop is also valid for gradual changes of load current.

Programmed Voltage Connections, Using External Resistor, Figure 5. Discrete voltage steps can be programmed with a resistance voltage divider valued at 200 ohms/volt output and a shorting-type switch as shown in figure 5. When continuous voltage variations are required, use a variable resistor with the same 200 ohms/volt ratio in place of the resistive voltage divider and shorting-type switch. Use a low temperature coefficient resistor to assure most stable operation.

As shown in figure 5, voltages can be programmed utilizing either local or remote sensing connections, as desired.

Programmed Voltage Connections Using Programming Voltage, Figure 6. The power supply output voltage can be programmed with an externally connected programming power supply. The output voltage of the programmed supply will maintain a one-to-one ratio with the voltage of the programming supply.

The programming supply must have a reverse current capability of 6 ma. minimum.

Alternatively, when supplies with less than 6 ma. reverse current capability are used, a resistor capable of drawing 6 ma. at the minimum programming voltage must be connected across the output terminals of the supply. This programming supply must be rated to handle all excess resistor current at the maximum programming voltage.

CONNECTIONS FOR OPERATION AS A CONSTANT CURRENT SOURCE

Automatic Crossover Constant Current Connections, Figure 3. Figure 3 shows the connections which are used when operating the power supply as a constant current source with automatic crossover, using local setting of current control.

In this mode of operation, when the load voltage increases, due to changing load resistance, to the limit of the OUTPUT VOLTAGE control setting, the power supply crossover circuit will cause the unit to operate as a constant voltage supply.

CONNECTIONS FOR SERIES OPERATION

The voltage capability of LK power supplies can be extended by series operation of two LK power supplies of equal or unequal voltage ratings. A maximum of 200 volts can be connected between either the +DC or -DC terminal and chassis ground.

The two units are shown connected for series operation in figure 7. Figure 7 shows the series connection diagram which would be suitable for use in all applications.

Diodes CR_M and CR_S, which protect the units against reverse voltage, must be capable of withstanding the maximum rated current.

The series connection permits operation for either constant voltage or constant current with automatic crossover to either mode of operation whenever the respective limiting operating current or voltage is reached. Figure 7 shows connection for either local or remote sensing, when the series combination is operated for constant voltage; figure 7a shows the connection required when the series combination is operated for constant current.

CONNECTIONS FOR PARALLEL OPERATION

The current capability of LK power supplies can be extended by parallel operation of two LK power supplies of equal* voltage capacities. The two units are shown connected for parallel operation in figure 8. One power supply designated the (M) unit controls its own output as well as the output of the second power supply, designated the (S) unit.

*For applications using supplies of unequal voltage ratings, consult factory for details of operation.

Unit (S) operates to regulate its current in a ratio to that of the (M) unit by comparing the current in its internal sampling resistor with that current sampled by the master internal sampling resistor. When power supplies of unequal current capacities are parallel connected the division of current supplied will be approximately equal to the ratio of the current ratings of the supplies.

Parallel connected units can be operated for constant voltage with local sensing as well as for constant current with automatic crossover. When operating for constant voltage, the (M) unit can automatically cross over into constant current operation.

DETAILED OPERATING PROCEDURES

SAFETY NOTICE

DANGEROUS VOLTAGES EXIST IN THIS EQUIPMENT. OBSERVE THE USUAL SAFETY PRECAUTIONS WHEN OPERATING OR SERVICING THE EQUIPMENT TO AVOID SHOCK OR INJURY.

CONSTANT VOLTAGE OPERATION, ADJUSTABLE CURRENT LIMIT

1. Remove AC power input to supply and place ON-OFF switch in OFF position before connecting load to the supply.

2. Determine load requirements, select wire size from figures 1 and 2 and choose desired type of supply-load connection from figures 3 and 4.

3. Connect supply to load as shown on the selected connection diagram.

NOTE: When shipped from the factory, the supply is ready for use as a constant current source with automatic crossover or as a local-sensing constant voltage source. Jumpers are connected at the factory as shown in figure 3. Take care to remove the appropriate jumpers for load requirements that need different supply-load connections. Refer to the appropriate connection diagram.

4. Turn OUTPUT VOLTAGE control knobs to the desired voltage setting.

5. When current to the load must be limited to an intermediate value within the current rating of the supply, turn the CURRENT LIMITER control knobs to the desired current limit setting. If no intermediate current limit is required, turn the control knobs CW to the position for full current rating for the maximum ambient temperature of operation. Refer to section on specifications.

6. Apply AC power to supply

7. Place ON-OFF switch in ON position and check that red indicator is lit.

8. Check that output current and output voltage meters indicate desired values; as required, adjust OUTPUT VOLTAGE control knobs and CURRENT LIMITER control knobs to obtain correct meter indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 6 and 4; for remote sensing connections, check at the load terminations of sensing leads on terminals 3 and 7.

9. Power supply is now in proper operation.

PROGRAMMED CONSTANT VOLTAGE OPERATION, ADJUSTABLE CURRENT LIMIT

1. Remove AC power input to the supply and place ON-OFF switch in OFF position before connecting load to the supply.

2. Determine load requirements, select wire size and length from figures 1 and 2. Choose desired type of supply-load connection from figures 5 or 6. Refer to paragraph on Programmed Voltage Connections.

3. Connect supply to load as shown on the selected connection diagram. As shown in figure 5, take care to use a shorting-type switch for the external programming control when several voltages are desired and the programming voltage method is not used.

4. Turn OUTPUT VOLTAGE control knobs to the extreme CCW position. Adjust external programming voltage control to desired voltage setting.

5. When current to the load must be limited to an intermediate value within the current rating of the supply, turn the CURRENT LIMITER control knobs to the desired current limit setting. If no intermediate current limit is desired, turn the control knobs CW to the position for full rated current for the ambient temperature of operation. Refer to section on specifications.

6. Apply AC power to the supply.

7. Place ON-OFF switch in ON position and check that red indicator is lit.

8. Check that output current and output voltage meters indicate desired values; as required, adjust CURRENT LIMITER knobs and external programming voltage control to obtain correct meter indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6; for remote sensing connections check at the load terminations of sensing leads on terminals 3 and 7.

9. Power supply is now operating properly.

CONSTANT CURRENT OPERATION WITH CROSSOVER, ADJUSTABLE VOLTAGE LIMIT

1. Remove AC power input to the supply and place ON-OFF switch in OFF position before connecting load to the supply.

2. Determine load requirements and connect load to the supply as shown in figure 3.

3. Turn the CURRENT LIMITER knobs to the desired current setting.

4. When load voltage must be limited to an intermediate value within the voltage rating of the supply, turn OUTPUT VOLTAGE control knobs to the desired voltage limit setting. If no intermediate voltage limit, within rating of supply is desired, turn control knobs to the full CW position to obtain voltage limit at maximum voltage rating of the supply.

5. Apply AC power to the supply.

6. Place ON-OFF switch in ON position and check that red indicator is lit.

7. Check that output current and output voltage meters indicate desired values; adjust OUTPUT VOLTAGE control knobs and CURRENT LIMITER control knobs as required to obtain correct indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6.

8. Power supply is now in proper operation.

SERIES CONNECTION CONSTANT VOLTAGE OPERATION, WITH CURRENT LIMIT

1. Remove AC power input to the (B) and (A) units and place ON-OFF switches in OFF position before connecting load to the supplies.

2. Determine load requirements, select wire size from figures 1 and 2 and choose correct type of series supply-load connections from figure 7. Refer to paragraph on Connections for Series Operation.

3. Connect supply to load as shown on the selected connection diagram. As required, select diodes CR_S and CR_M in accordance with instructions contained in Connections for Series Operation.

4. Turn (A) and (B) unit OUTPUT VOLTAGE control knobs to the desired total voltage setting.

5. When current to the load must be limited to an intermediate value within current rating of the units, turn each CURRENT LIMITER control knob to the desired setting. If no intermediate current limit is required, turn the control knobs of each unit CW to the position for full current rating for the maximum ambient temperature of operation. Refer to section on specifications.

NOTE: When units of unequal current rating are series connected, the unit with the lower current rating must be capable of delivering the desired load current.

6. Apply AC power to the supplies.

7. Place ON-OFF switches of both units in ON position and check that red indicators are lit.

8. Check that output current and output voltage meters indicate desired values; total voltage is equal to sum of (A) and (B) units. As required, adjust OUTPUT VOLTAGE control knobs and CURRENT LIMITER control knobs of both units to obtain correct indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals of both units; positive (+) terminal of (A) unit and minus (-) terminal of the (B) unit are the output terminals of the series combination.

For remote sensing connection, make checks at the load terminations of sensing leads from terminal 7 of (A) and from terminal 3 connection of (B) unit.

9. Power supplies are now in proper operation.

PARALLEL CONNECTION CONSTANT VOLTAGE OPERATION, WITH CURRENT LIMIT

1. Remove AC power input to each supply and place ON-OFF switch on both (M) and (S) units in OFF position before connection load to the supplies.

2. Determine load requirements, select wire size from figures 1 and 3 in the manual. Refer to paragraph on Connections for Parallel Operation.

3. Connect supplies to load as shown in connection diagram, figure 8.

NOTE: When shipped from the factory, each supply is ready for use as a constant current source or as a local-sensing constant voltage source. Jumpers are connected at the factory. Take care to remove the appropriate jumpers for load requirements that need different supply-load connections. Refer to the appropriate connection diagram.

4. Turn OUTPUT VOLTAGE control knobs on the (M) unit to the desired voltage setting, and turn the OUTPUT VOLTAGE control knobs on the (S) unit to fully CCW position.

5. When current to the load must be limited to an intermediate point, turn the CURRENT LIMITER control knobs on both the (M) and (S) units to the desired current limit setting. Set current limit control on the (M) and (S) units to the position indicating the current value to be delivered by the respective unit. If no intermediate current limit is desired, turn the CURRENT LIMITER control knobs CW on both (M) and (S) units to the position for full rated current for the maximum ambient temperature of operation. Refer to section on specifications.

6. Apply AC power to each supply.

7. Place ON-OFF switches on (M) and (S) units in ON position and check that red indicators are lit.

8. Check that output current and output voltage meters on both (M) and (S) units indicate desired values; as required, adjust OUTPUT VOLTAGE control and CURRENT LIMITER control on (M) unit to obtain correct meter indications. For non-metered models use externally connected meters and check that correct meter indications exist at output terminals 4 and 6 of the (M) unit.

9. Power supplies are now in proper operation.

OPERATION AFTER PROTECTIVE DEVICE SHUTDOWN

Thermostat Shutdown

The thermostat opens the input circuit only when the temperature of the transistor heat radiator exceeds a maximum safe value. The thermostat will automatically reset when the temperature of the radiator decreases to safe operating value. After eliminating the cause(s) for overheating and allowing time for the power supply to cool to a proper temperature, resume operation of the supply. Refer to appropriate operation paragraph in DETAILED OPERATING PROCEDURES.

Fuse Shutdown

Internal component failure is prevented by fuses which protect the components from damage caused by excessive currents. Fuses will blow when the maximum rated current value for the fuse is exceeded. Fatigue failure of fuses can occur when mechanical vibrations from the installation combine with thermally induced stresses to weaken the fuse metal. Many fuse failures are caused by a temporary condition and replacing the blown fuse will make the fuse protected circuit operative.

MAINTENANCE

GENERAL

This section describes trouble analysis routine, replacement procedures, calibration and test procedures that are useful for servicing the Lambda power supply. Refer to the section on specifications and features for the minimum performance standards.

TROUBLE ANALYSIS

Whenever trouble occurs, systematically check all fuses, primary power lines, external circuit elements, and external wiring for malfunctions before trouble shooting the equipment. Failures and malfunctions often can be traced to simple causes such as improper jumper and supply-load connections or fuse failure due to metal fatigue.

CHECKING TRANSISTORS AND CAPACITORS

Check transistors with an in-circuit transistor checker. If no checker is available, transistors can be checked with an ohmmeter that has a highly limited current capability. Observe proper polarity for PNP or NPN to avoid error in measurement. The forward transistor resistance is low but never zero; backward resistance is always higher than the forward resistance.

Do not assume trouble is eliminated when only one part is replaced. This is especially true when one transistor fails, causing other transistors to fail. Replacing only one transistor and turning power on, before checking for additional defective components could damage the replaced component.

When soldering semi-conductor devices, hold the lead being soldered with a pair of pliers placed between the component and the solder joint to provide an effective heat sink.

> NOTE: The leakage resistance obtained from a simple resistance check of a capacitor is not always an indication of a faulty capacitor. In all cases the capacitors are shunted with resistances, some of which have low values. Only a dead short is a true indication of a shorted capacitor.

PRINTED CIRCUIT BOARD MAINTENANCE TECHNIQUES

1. If foil intact but not covered with solder it is a good contact. Do not attempt to cover with solder.

2. Voltage measurements can be made from either side of the board. Use a needle-point probe to penetrate to the wiring whenever a protective coating is used on the wiring. A brass probe can be soldered to an alligator clip adapted to measuring instrument.

3. Always use a heat sink when soldering transistors; atransistor pad with mounting feet is an effective heat sink.

4. Broken or damaged printed wiring is usally the result of an imperfection, strain or careless doldering. To repair small breaks, tin a short piece of hook-up wire to bridge the break, and holding the wire in place, flow solder along the length of wire so that it becomes part of the circuitry.

5. When unsoldering components from the board never pry or force loose the part; unsolder the component by using the wicking process described below:

(a) Select a 3/16 inch tinned copper braid for use as a wick; if braid is not available, select AWG No. 14 or No. 16 stranded wire with 1/2 inch insulation removed.

(b) Dip the wick in liquid rosin flux.

(c) Place the wick onto the soldered connection and apply soldering iron onto the wick.

(d) When sufficient amount of solder flows onto the wick, freeing the component, simultaneously remove iron and wick.

ADJUSTMENT OF CALIBRATION CONTROLS

Whenever parts are replaced, adjust calibration controls only when voltage and current indications are improper and do not reflect maximum ratings.

Adjust Maximum Output Voltage Set Control R272 as Follows

1. Remove AC power input to the supply and place ON-OFF switch in OFF position.

2. Unsolder wiper of R272 from resistor housing.

3. Operate the power supply for constant voltage with local-sensing jumpers connected as shown in figure 3, and no external load.

4. Turn OUTPUT VOLTAGE control knobs fully clockwise and, using a DC voltmeter of one percent accuracy or better, adjust R272 to provide output voltage E_O MAX + 0.20 volts; where E_O MAX is the rated output voltage of the supply.

5. After adjustment is completed, remove AC power input to the supply and solder wiper of R272 to potentiometer housing.

Adjust Maximum Output Current Set Control R255 as Follows:

1. Remove AC power input to the supply and place ON-OFF switch in OFF position.

2. Unsolder wiper of R255 from resistor housing.

3. Turn OUTPUT VOLTAGE control knobs and CURRENT LIMITER control fully CW.

4. Operate the power supply for constant current crossover, connected as shown in figure 3, with a short circuit across the output terminals.

5. Adjust R255 for 105% of rated current output at 40°C ambient, using any DC ammeter of one percent accuracy or better.

6. After adjustment is completed, remove the power input to the supply and solder wiper of R255 to potentiometer housing.

Adjust Series Regulator Voltage Set Control R152 as Follows:

1. Remove AC power input to the supply and place ON-OFF switch in OFF position.

2. Unsolder wiper of R152 from resistor housing.

3. Turn OUTPUT VOLTAGE control knobs and CURRENT LIMITER control knobs fully CW.

4. Connect DC voltmeter of one percent accuracy or better, between output terminal 6 and collector at Q302.

5. Connect power supply for constant voltage operation with local sensing jumpers connected as shown in figure 3.

6. Connect resistive load. Calculate load value as follows:

$$R_{LOAD} = \frac{E_{MAX}}{I_{MAX}} \text{ at } 40°C$$

7. Provide AC input power of 132 VAC to supply and place ON-OFF switch in ON position.

8. Adjust R152 until voltmeter indicates applicable voltage listed here for the appropriate LK model.

MODEL	VOLTMETER INDICATION
LK340	8.0 VDC
LK341	8.0 VDC
LK342	8.5 VDC
LK343	10.0 VDC
LK344	12.0 VDC
LK345	12.0 VDC

PERFORMANCE CHECKS

Checks With Constant Voltage Operation

Check the ripple and regulation of the power supply using the test connection diagram shown in figure 9. Use suggested test equipment or equivalent to obtain accurate results. Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Set the differential meter, DC VTVM (John Fluke Model 801H or equivalent) to the selected power supply operating voltage. Check the power supply load regulation accuracy while switching from the load to no-load condition. Long load leads should be a twisted pair to minimize AC pick-up.

Use a Variac to vary the line voltage from 105-132 or 132-105 volts AC and check the power supply line regulation accuracy on the VTVM differential meter.

Use a VTVM, Ballatine 320 or equivalent, to measure rms ripple voltage of the power supply DC output.

Checks With Constant Current Operation

Check the regulation of the power supply using the test connection diagram shown in figure **10.** Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Check the power supply load regulation accuracy while switching from the short circuit to load condition. Measure the voltage across sensing resistor Rs. Use John Fluke Model 801H or equivalent for the VTVM connected across Rs. For Rs, use a resistor having value $Rs = \frac{1}{Iout}$

To obtain regulation figure, substitute values obtained into regulation formula:

$$\frac{\Delta E}{Rs} = \text{Regulation in milliamperes,}$$

where ΔE is the voltage change in millivolts and Rs is the resistance of the sensing resistor.

Use a Variac to vary the line voltage from 105-132 or 132-105 volts A and check the power supply line regulation accuracy using VTVM and the regulation formula:

$$\frac{\Delta E}{Rs}$$

SERVICE

When additional instructions are required or repair service is desired, contact the nearest office of the Lambda Electronics Corp. where trained personnel and complete facilities are ready to assist you.

Please include the power supply model and serial number together with complete details of the problem. On receipt of this information, Lambda will supply service data or advise shipping for factory repair service.

All repairs not covered by the warranty will be billed at cost and an estimate forwarded for approval before work is started.

PARTS ORDERING

Standard components and special components used in Lambda power supply can be obtained from the factory. In case of emergency, critical spare parts are available through any Lambda office.

The following information must be included when ordering parts:

1. Model number and serial number of power supply and purchase date.
2. Lambda part number.
3. Description of part together with circuit designation.
4. If part is not an electronic part, or is not listed, provide a description, function, and location of the part.

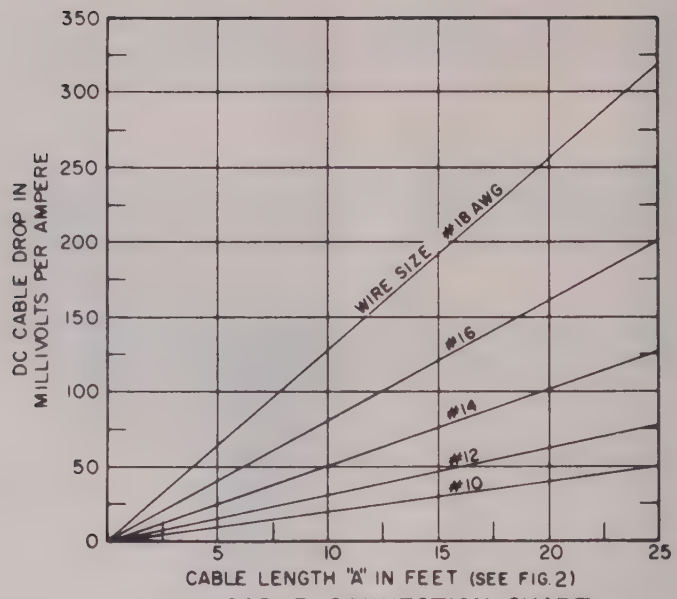

FIG. 1. CABLE CONNECTION CHART

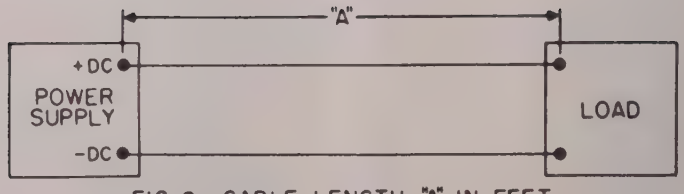

FIG. 2. CABLE LENGTH "A" IN FEET

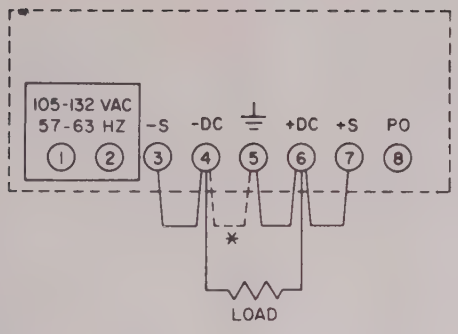

NOTE.
* FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS 5 AND 6 AND RECONNECT TO TERMINALS 4 AND 5.

FIGURE 3 TWO-WIRE CONNECTION, FOR CV + CC

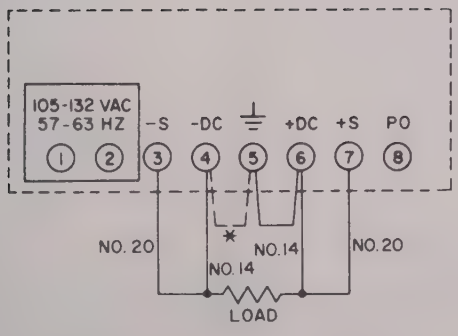

NOTE.
* FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS 5 AND 6 AND RECONNECT TO TERMINALS 4 AND 5.

FIGURE 4 FOUR-WIRE CONNECTION CV

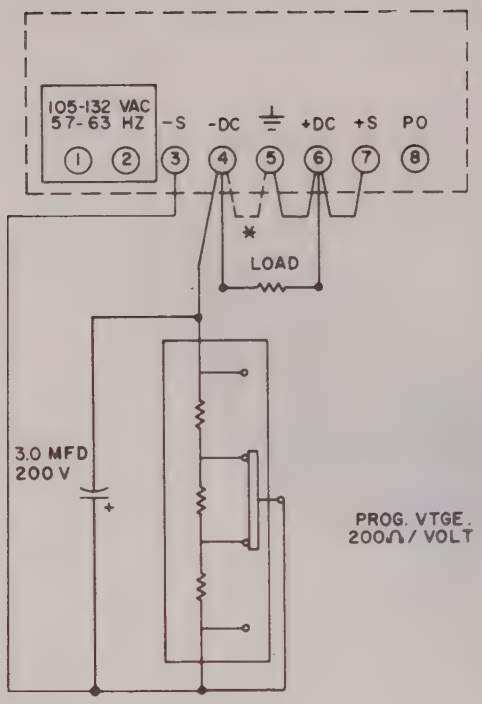

(A) LOCAL SENSING

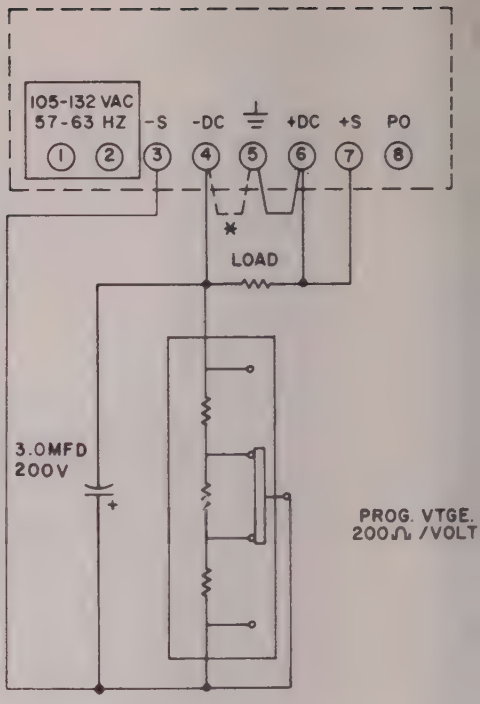

(B) REMOTE SENSING

NOTE:
* FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS 5 AND 6 AND RECONNECT TO TERMINALS 4 AND 5.

FIGURE 5 PROGRAMMED VOLTAGE, WITH EXTERNAL RESISTOR

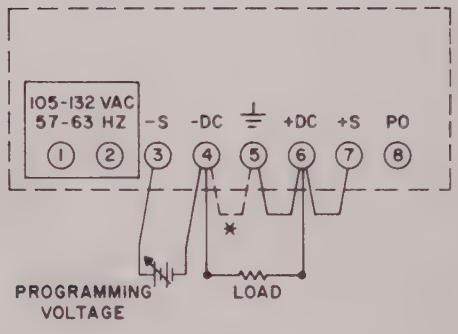

(A) LOCAL SENSING

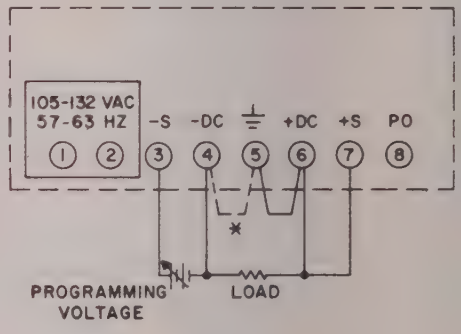

(B) REMOTE SENSING

NOTE:
* FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS 5 AND 6 AND RECONNECT TO TERMINALS 4 AND 5.

FIGURE 6 PROGRAMMED VOLTAGE, WITH EXTERNAL PROGRAMMING VOLTAGE SOURCE

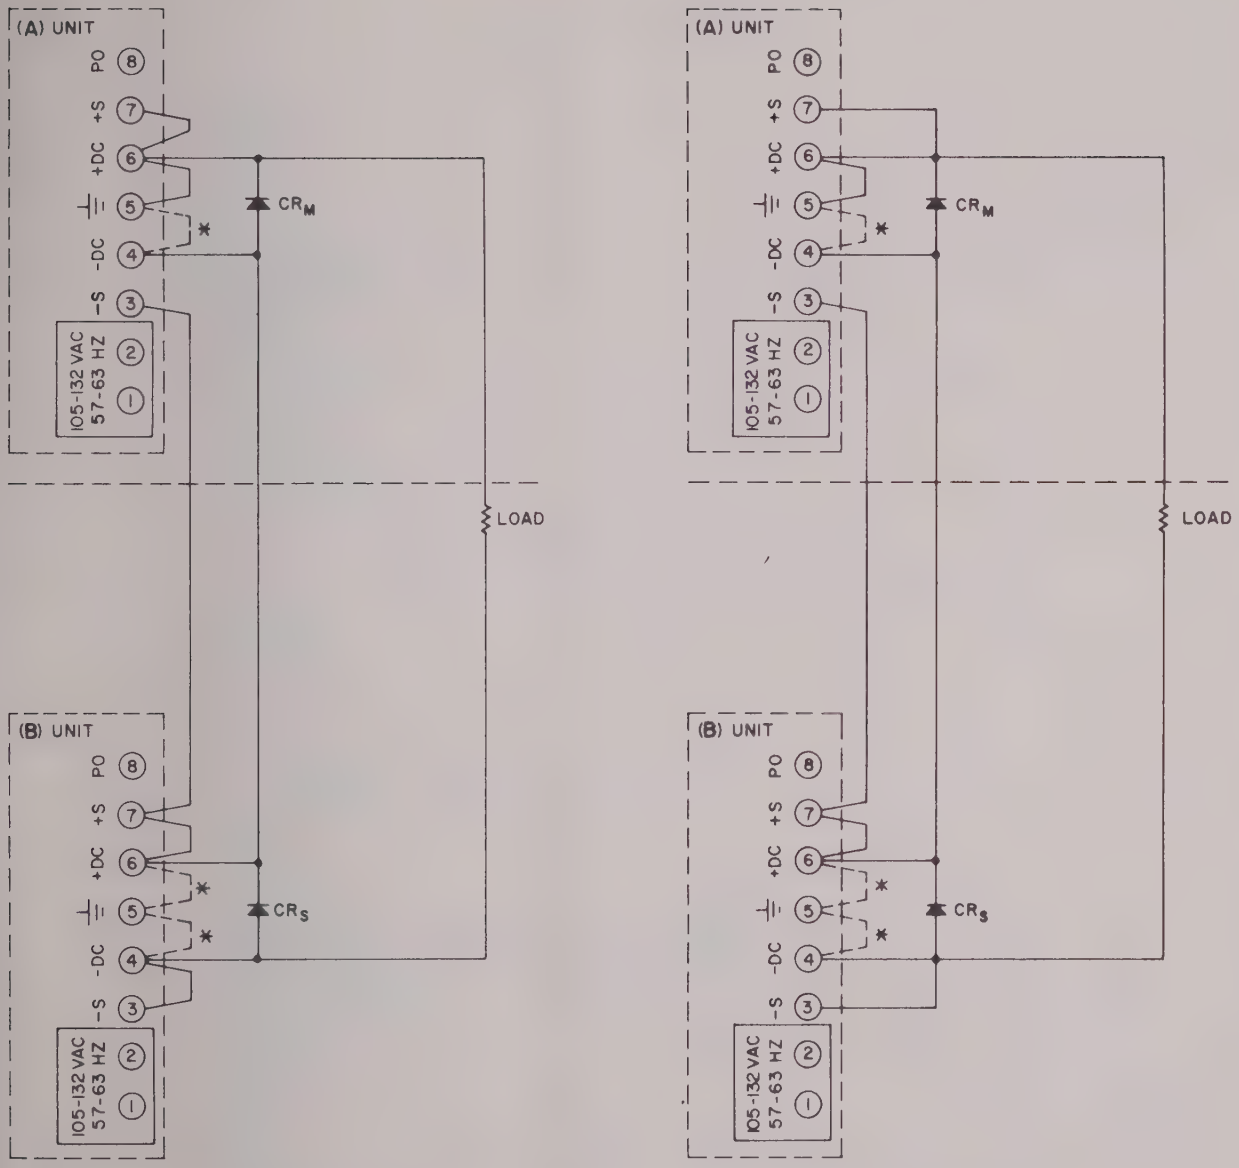

(A) LOCAL SENSING

(B) REMOTE SENSING

NOTE:

* MAKE ONLY ONE GROUND CONNECTION FOR THE SERIES COMBINATION; TO CHANGE GROUND AS SHOWN, REMOVE JUMPER FROM TERMINALS 5 AND 6 ON (M) UNIT AND CONNECT ANY ONE OF THE OTHER JUMPERS AS SHOWN IN DOTTED LINE.

FIGURE 7 SERIES CONNECTION

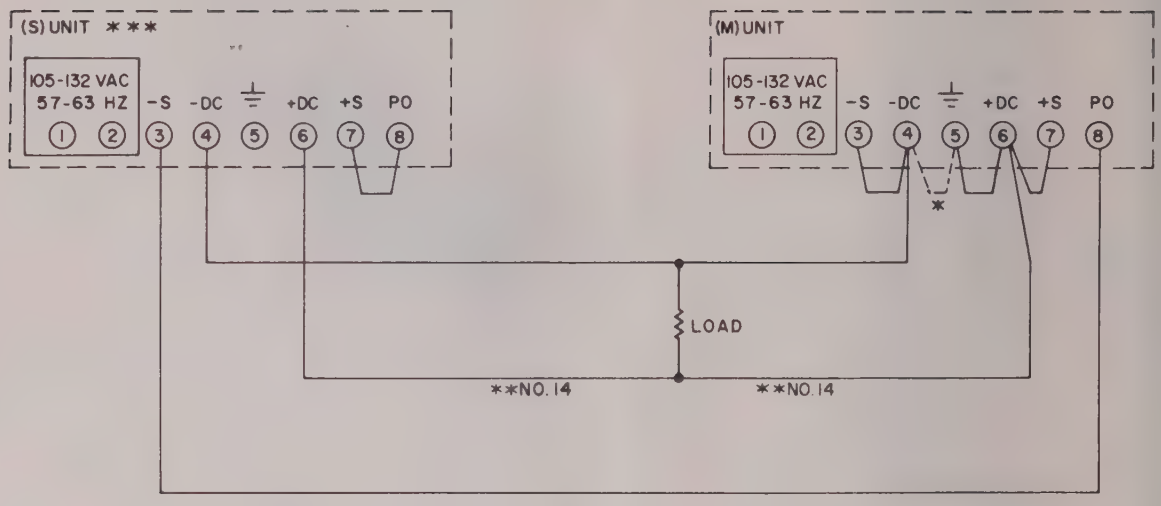

***CAUTION: VOLTAGE CONTROLS OF (S) UNIT MUST BE SET FOR ZERO VOLTS OUTPUT.

NOTE:
*FOR NEGATIVE GROUND, DISCONNECT JUMPER FROM TERMINALS 5 AND 6 AND RECONNECT TO TERMINALS 4 AND 5.
**FOR IMPROVED CURRENT BALANCING, THE "+DC" LEADS MUST BE THE SAME LENGTH AND SIZE.

FIGURE 8 PARALLEL CONNECTION, LOCAL SENSING

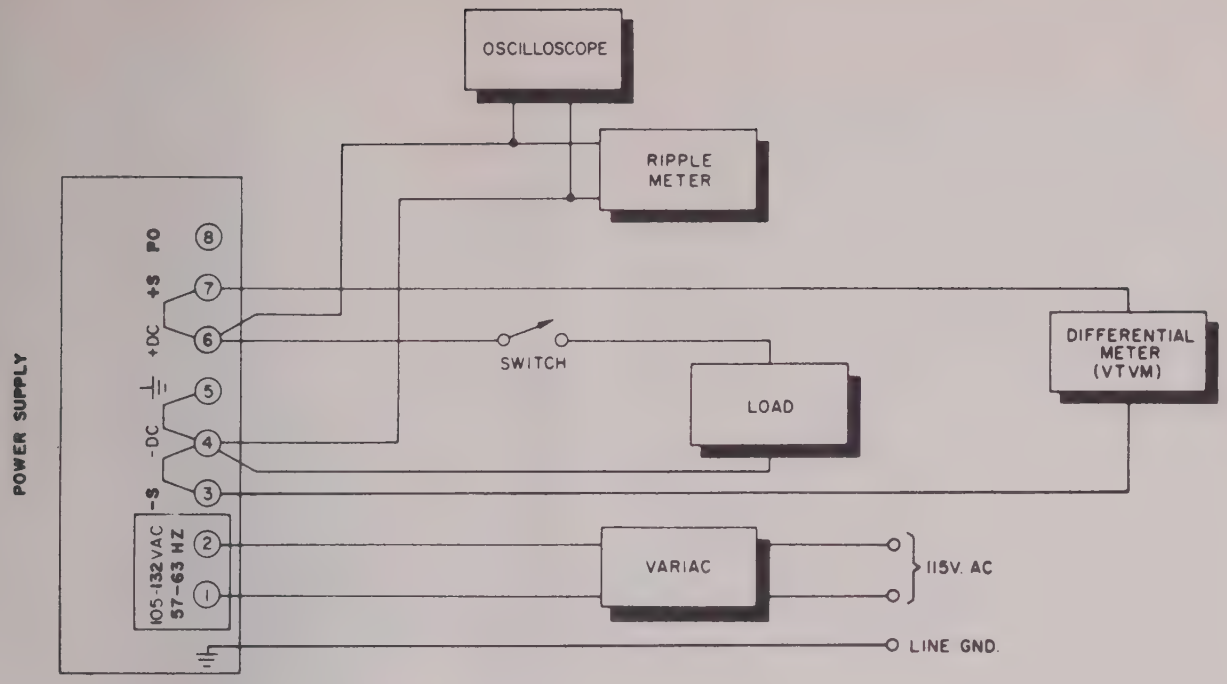

NOTES

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND.
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY.

FIGURE 9 TEST CONNECTIONS FOR CONSTANT VOLTAGE PERFORMANCE CHECKS

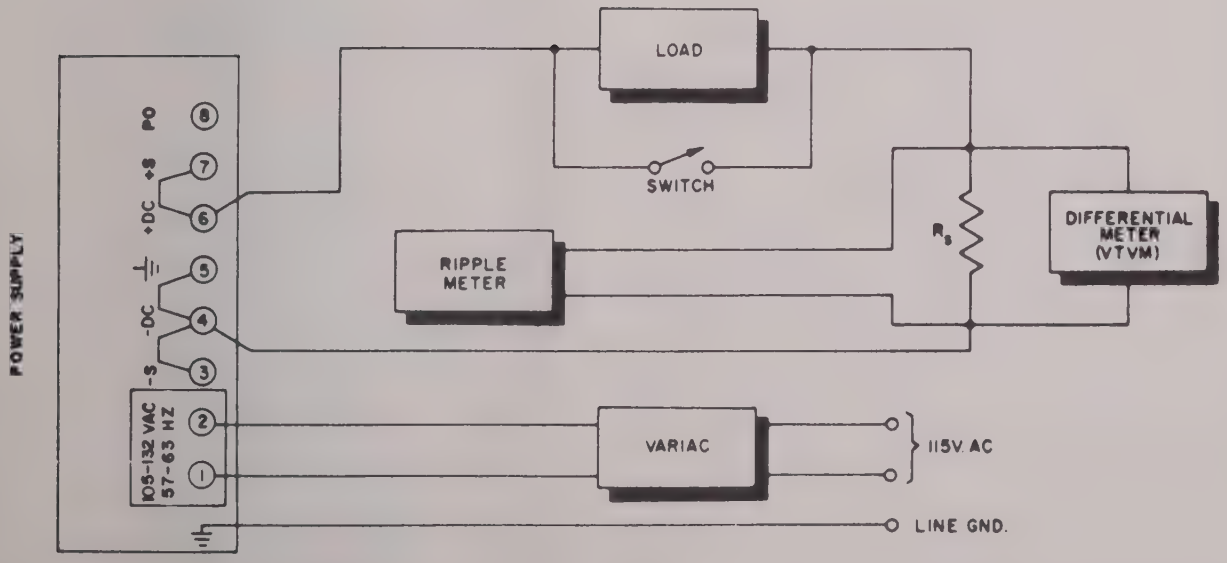

NOTES:

1. REGULATION AND RIPPLE CHECK METERS MUST NOT BE GROUNDED THROUGH THREE-WIRE LINE CORD TO GROUND.
2. PERFORM CHECKS WITH LOCAL SENSING CONNECTIONS ONLY.

FIGURE 10 TEST CONNECTIONS FOR CONSTANT CURRENT PERFORMANCE CHECKS

GENERAL DESCRIPTION

Rack adapter LRA-1 is designed for use in equipment racks where ruggedized mounting of units is required. The adapter can be used with or without chassis slides.

Rack adapter LRA-2 is designed for simple applications of rack installation where chassis slides and ruggedized mounting of equipment are not required.

Both rack adapter LRA-1 and LRA-2 can be used to install 1/4-rack or 1/2-rack power supply units into equipment racks. Each adapter can accept various combinations of 1/4 and 1/2-rack units up to four 1/4-rack units or two 1/2-rack units.

INSTALLATION OF 1/2 RACK UNITS INTO LRA-1

To install 1/2-rack power supply units, remove slide numbers 2 and 3 and/or 6 and 7, together with securing hardware and associated slide bar nut.

Using slide screws and slide bar nuts that were removed, store removed slides on the frame at the rear of the adapter where screw clearance holes are provided for securing each slide to the adapter.

SHIPMENT OF UNITS MOUNTED IN LRA-1

To protect the unit against damage from shock and vibrations when transporting adapter with installed units, eight universal tie-down mounting holes, located in the adapter base, at the rear of the rack adapter, are used to secure 1/4-rack and/or 1/2-rack units into the rack adapter. Secure each unit using two 6-32 x 5/8 screws, two lockwashers and two spacers installed from the bottom side of the rack adapter. See detail A for typical securing hardware. Eight spacers are supplied with rack adapter LRA-1.

RUGGEDIZED MOUNTING

When ruggedized mounting of units is required, follow the procedure described for SHIPMENT OF UNITS MOUNTED IN LRA-1. See detail A for typical securing hardware.

MOUNTING CHASSIS SLIDES

Mount chassis slides using the following hardware. To assure unrestricted mounting of units into the adapter designated screw lengths must not be exceeded. Insert screws into designated holes and secure slide in position using long bar nut supplied with rack adapter LRA-1.

CHASSIS TRAK NO. CTS.-116:
10-32 x 7/16 fl-hd(82°);
use A holes.

JONATHAN NO. 130 QD:
6-32 x 1/2 fl-hd(82°);
use B and C holes.

GRANT PULLEY NO. 4435:
6-32 x 5/16 fl-hd(100°);
use B and D holes.

USING BLANK PANELS AND BLANK CHASSIS

Blank front panels Model LBP-10 and LBP-20 are available for covering any 1/4-rack or 1/2-rack opening respectively. The blank panels can be used with rack adapter LRA-1 and LRA-2 whenever a 1/4-rack or 1/2-rack space in the adapter is not occupied by a unit. Secure each panel in position using four 6-32 x 3/8 pan-head screws supplied with the rack adapter.

Paneled blank chassis Models LBC-10 (1/4-rack size) and LBC-20 (1/2-rack size) are available for any 1/4-rack or 1/2-rack equipment design package. These blank chassis enable the user of rack adapters LRA-1 and LRA-2 to design system equipment that can be packaged on ready-made chassis that are compatible with existing system components. Both blank chassis can be used with rack adapters LRA-1 and LRA-2.

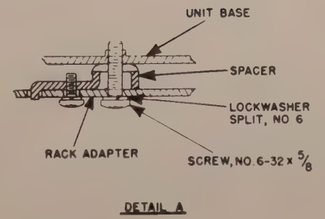

DETAIL A

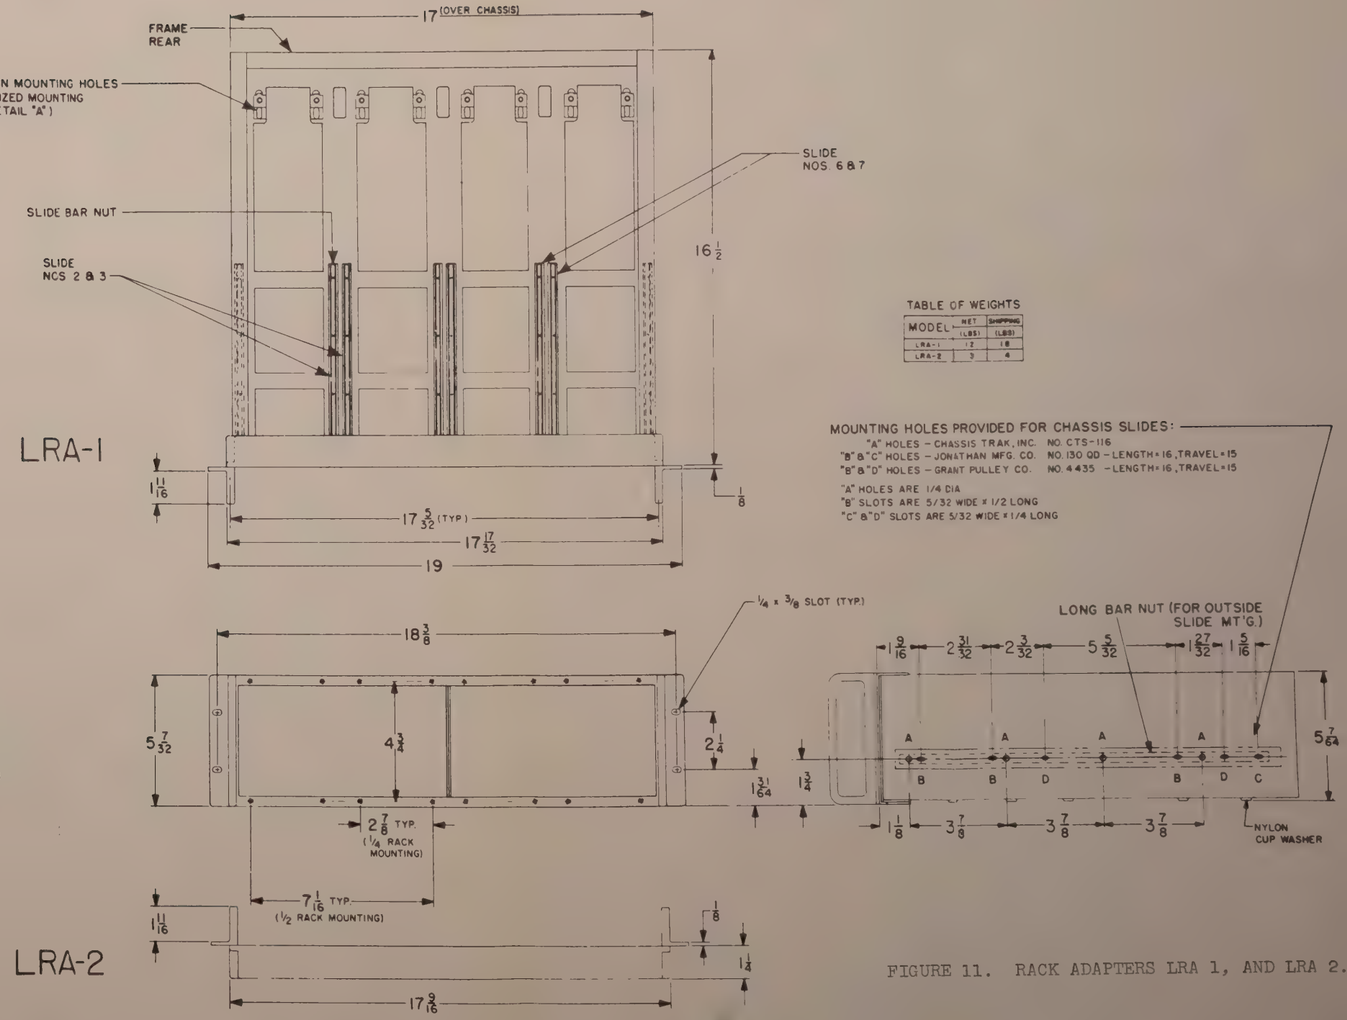

FIGURE 11. RACK ADAPTERS LRA 1, AND LRA 2.

SCB-341A

NOTES

1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED.
2. RESISTOR WATTAGE 1/2 WATT; RESISTORS ABOVE 2 WATTS ARE WIREWOUND UNLESS OTHERWISE NOTED.
3. RESISTOR TOLERANCES: COMPOSITION ±10%; WIREWOUND ±5% UNLESS OTHERWISE NOTED.
4. CAPACITOR TOLERANCES: ELECTROLYTIC, -10% +100%; TANTALUM, ±20%; PAPER, ±10%; CERAMIC, ±20%; MICA, ±20%; MYLAR, ±10%; UNLESS OTHERWISE NOTED.
5. SYMBOLS:
   - INDICATES CLOCKWISE ROTATION OF SHAFT.
   - INDICATES CONNECTION TO CHASSIS.
   - INDICATES ADJUSTMENT OR CALIBRATION CONTROL.
   - INDICATES ACTUAL UNIT MARKING.
   - INDICATES FRONT-PANEL MOUNTED COMPONENT.
   - * INDICATES FACTORY ADJUSTMENT; SEE INSTRUCTION MANUAL.
   - ○ INDICATES TRANSFORMER LUG TERMINAL.
   - THIS DIODE IS LAMBDA PART NO FBL-00-030, CAN BE REPLACED WITH STANDARD TYPE IN645 OR IN4002 DIODE UNLESS OTHERWISE NOTED.
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS:
   - A CONSTANT VOLTAGE
     READ ITALICIZED NUMBERS FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT VOLTAGE OPERATION.
     INPUT: 120 VAC, 60 HZ
     OUTPUT: MAX RATED VOLTAGE, OUTPUT CURRENT ZERO.
   - B CONSTANT CURRENT
     READ NUMBERS IN PARENTHESES FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT CURRENT OPERATION
     INPUT: 120 VAC, 60 HZ, 30° AMBIENT
     OUTPUT: 0 VOLTS, OUTPUT CURRENT MAX RATED CURRENT (SHORT CIRCUIT)

   INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED

   DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT VOLTMETER BETWEEN +DC (TERM. 6) AND INDICATED POINTS UNLESS OTHERWISE NOTED.
7. DESIGNATIONS ARE LAMBDA PART NUMBERS
8. ○ INDICATES TERMINAL LOCATED ON TERMINAL BOARD "C", OR PRINTED WIRING BOARDS "A", "B".
9. COAT BOTH SIDES OF MICA WASHER OR ANODIZED ALUMINUM WAFER WITH DOW CORNING NO. 340 SILICONE GREASE.

CAUTION
NOT AT CHASSIS GROUND POTENTIAL
DO NOT SHORT TO CHASSIS GROUND

NOTE 9
MICA INSULATING WASHER
CHASSIS GROUND

COLLECTOR (CASE) — BASE — EMITTER
TRANSISTOR, PIN VIEW

DUAL COMPLEMENTARY TRANSISTOR, PIN VIEW
Q251, Q252
Q211, Q212

PRE-REGULATOR CONTROL
RAMP C.C. SOURCE
REFERENCE SOURCE
SERIES REGULATOR CONTROL
CURRENT CONTROL GENERATOR
CURRENT REGULATOR COMPARATOR
AMPLIFIER
VOLTAGE REGULATOR COMPARATOR
OUTPUT REFERENCE
SCR GATE TRIGGER
SERIES REGULATOR VOLTAGE SET
COMPARATOR
CURRENT LIMITER IDC
SERIES REGULATOR
CONSTANT CURRENT PRE LOAD
PRE-REGULATOR
OUTPUT VOLTAGE VDC

TB1 REAR OUTPUT TERMINALS
PO
+S
+V
-V
-S

FOR WIRING OF POWER SUPPLY TO LOAD REFER TO POWER SUPPLY-TO-LOAD WIRING DIAGRAMS

DOTTED CONNECTIONS SHOWN ON TB1 INDICATE JUMPERS IN PLACE FOR LOCAL SENSING "2-WIRE CONNECTION"

RATING TABLE	
AMBIENT TEMP	MAX LOAD
40°C	13.5 A
50°C	11.0 A
60°C	10.0 A
71°C	7.7 A

SCHEMATIC DIAGRAM
REGULATED POWER SUPPLY
0-36 VOLTS

MODEL LK341

LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK
A Veeco SUBSIDIARY

THIS SCHEMATIC APPLIES TO UNITS BEARING SERIAL NO. PREFIX A

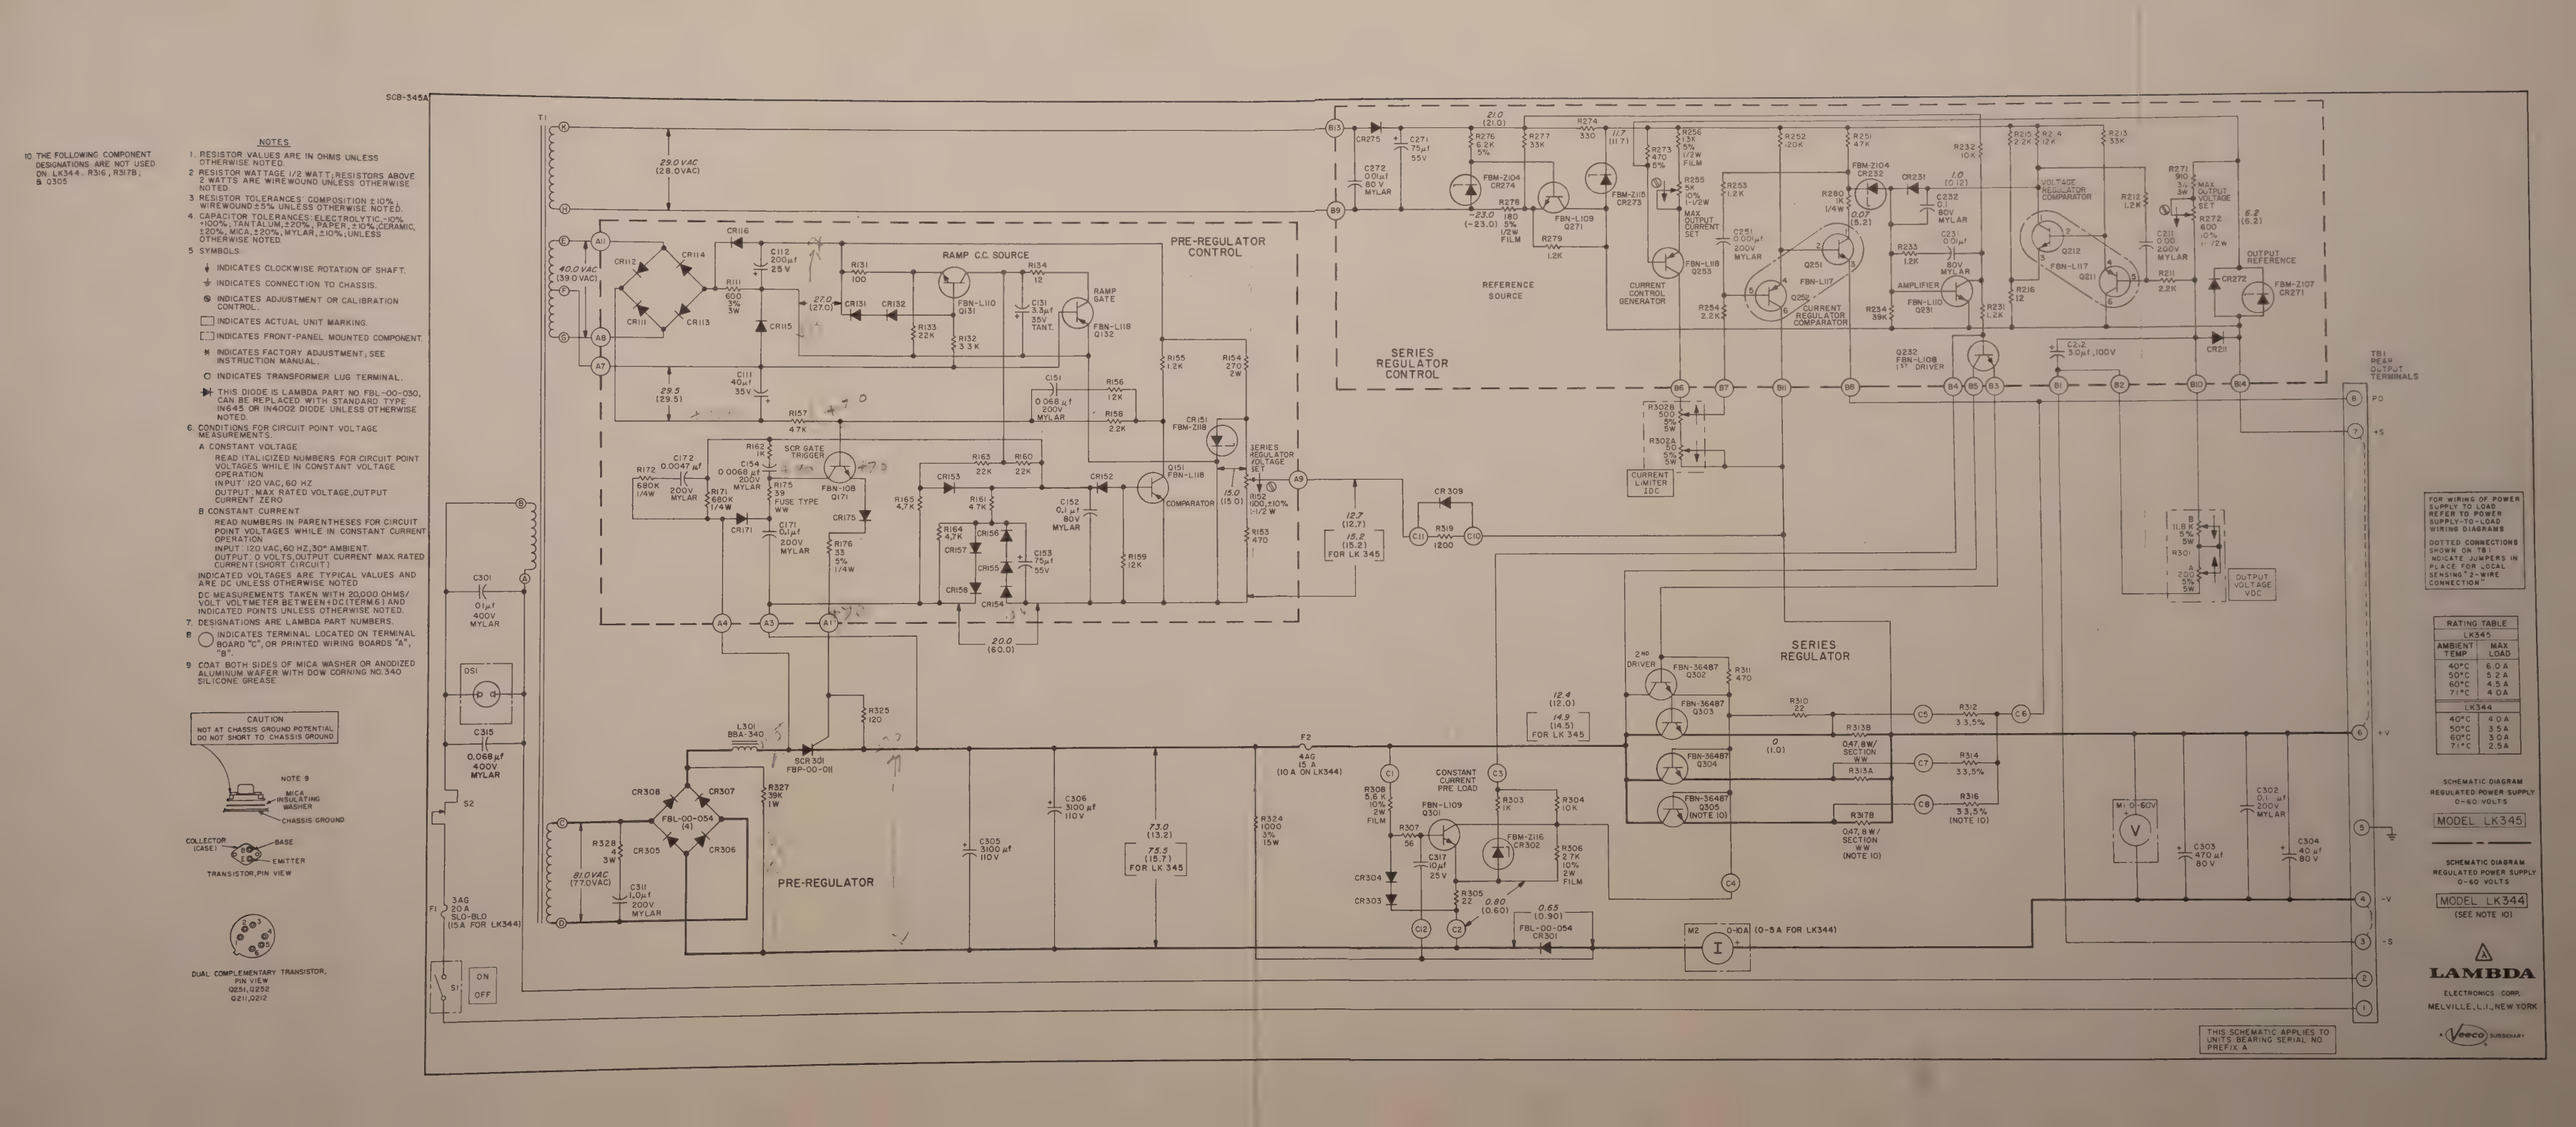
SCB-345A
NOTES
1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED.
2 RESISTOR WATTAGE 1/2 WATT; RESISTORS ABOVE 2 WATTS ARE WIREWOUND UNLESS OTHERWISE NOTED.
3 RESISTOR TOLERANCES: COMPOSITION ±10% WIREWOUND ±5% UNLESS OTHERWISE NOTED.
4. CAPACITOR TOLERANCES: ELECTROLYTIC, -10% +100%; TANTALUM, ±20%; PAPER, ±10%; CERAMIC, ±20%; MICA, ±20%; MYLAR, 5.10%; UNLESS OTHERWISE NOTED.
5 SYMBOLS:
INDICATES CLOCKWISE ROTATION OF SHAFT.
INDICATES CONNECTION TO CHASSIS.
INDICATES ADJUSTMENT OR CALIBRATION CONTROL.
INDICATES ACTUAL UNIT MARKING.
INDICATES FRONT-PANEL MOUNTED COMPONENT.
INDICATES FACTORY ADJUSTMENT, SEE INSTRUCTION MANUAL.
INDICATES TRANSFORMER LUG TERMINAL.
THIS DIODE IS LAMBDA PART NO. FBL-00-030, CAN BE REPLACED WITH STANDARD TYPE IN645 OR IN4002 DIODE UNLESS OTHERWISE NOTED.
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS.
A CONSTANT VOLTAGE.
READ ITALICIZED NUMBERS FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT VOLTAGE OPERATION.
INPUT: 120 VAC, 60 HZ
OUTPUT: MAX RATED VOLTAGE, OUTPUT CURRENT ZERO
B CONSTANT CURRENT
READ NUMBERS IN PARENTHESES FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT CURRENT OPERATION.
INPUT: 120 VAC, 60 HZ, 30° AMBIENT.
OUTPUT: 0 VOLTS, OUTPUT CURRENT MAX RATED CURRENT (SHORT CIRCUIT)
INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED
DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT VOLTMETER BETWEEN +DC (TERM 6) AND INDICATED POINTS UNLESS OTHERWISE NOTED.
7. DESIGNATIONS ARE LAMBDA PART NUMBERS.
8 INDICATES TERMINAL LOCATED ON TERMINAL BOARD "C", OR PRINTED WIRING BOARDS "A", "B".
9 COAT BOTH SIDES OF MICA WASHER OR ANODIZED ALUMINUM WAFER WITH DOW CORNING NO. 340 SILICONE GREASE.
10 THE FOLLOWING COMPONENT DESIGNATIONS ARE NOT USED ON LK344: R316, R317B; & Q305
CAUTION
NOT AT CHASSIS GROUND POTENTIAL
DO NOT SHORT TO CHASSIS GROUND
NOTE 9
MICA INSULATING WASHER
CHASSIS GROUND
COLLECTOR (CASE)
BASE
EMITTER
TRANSISTOR, PIN VIEW
DUAL COMPLEMENTARY TRANSISTOR, PIN VIEW
Q251, Q252
Q211, Q212
T1
29.0 VAC (28.0 VAC)
40.0 VAC (39.0 VAC)
29.5 (29.5)
81.0 VAC (77.0 VAC)
CR111
CR112
CR113
CR114
CR115
CR116
C111 40µf 35V
C112 200µf 25V
C113 1.0µf 200V MYLAR
R111 600 3% 3W
27.0 (27.0)
PRE-REGULATOR CONTROL
RAMP C.C. SOURCE
R131 100
CR131
CR132
R133 22K
R132 3.3K
FBN-L110 Q131
R134 12
C131 3.3µf 35V TANT.
RAMP GATE
FBN-L118 Q132
C151 0.068µf 200V MYLAR
R156 12K
R157 47K
R158 2.2K
CR151 FBN-2118
R155 1.2K
R154 270 2W
SERIES REGULATOR VOLTAGE SET
R152 (200 ±10% 1/2W)
15.0 (15.0)
SCR GATE TRIGGER
R162 1K
C154 0.0068µf 200V MYLAR
R175 39 FUSE TYPE WW
FBN-108 Q171
CR175
R176 33 5% 1/4W
C171 0.1µf 200V MYLAR
R172 680K 1/4W
C172 0.0047µf 200V MYLAR
R171 680K 1/4W
CR171
R163 22K
R160 22K
R161 4.7K
R165 4.7K
CR153
CR152
C152 0.1µf 80V MYLAR
Q151 FBN-L118 COMPARATOR
R159 12K
R153 470
CR157
CR156
CR155
CR158
CR154
C153 75µf 55V
20.0 (60.0)
SERIES REGULATOR CONTROL
REFERENCE SOURCE
CR275
C272 0.01µf 80V MYLAR
C271 75µf 55V
21.0 (21.0)
R276 6.2K 5%
R277 33K
R274 330
11.7 (11.7)
FBM-Z104 CR274
FBN-L109 Q271
R278 180 5% 1/2W FILM
23.0 (-23.0)
R279 1.2K
FBM-Z115 CR273
CURRENT CONTROL GENERATOR
R256 13K 5% 1/2W FILM
R273 470 5%
R255 5K 10% 1-1/2W
MAX. OUTPUT CURRENT SET
FBN-L118 Q253
R253 1.2K
C251 0.001µf 200V MYLAR
R254 2.2K
Q254 Q255 CURRENT REGULATOR COMPARATOR
FBN-L117
R252 .20K
R251 47K
FBM-Z104 CR232
R280 1K 1/4W
0.07 (5.2)
Q251
R234 39K
R233 1.2K
AMPLIFIER
FBN-L110 Q231
CR231
C232 0.1 80V MYLAR
1.0 (0.12)
C231 0.01µf 80V MYLAR
R232 10K
R215 2.2K
R2 4 12K
R213 33K
VOLTAGE REGULATOR COMPARATOR
Q212
FBN-L117 Q211
R212 1.2K
R216 12
R271 90Ω 3% 3W MAX OUTPUT VOLTAGE SET
R272 600 10% 1-1/2W
6.8 (6.2)
C211 0.001 200V MYLAR
R211 2.2K
OUTPUT REFERENCE
CR272
FBM-Z107 CR271
CR211
Q232 FBN-L108 1ST DRIVER
C212 3.0µf, 100V
R3028 500 5% 5W
R3029 50 5% 5W
CURRENT LIMITER IDC
TB1 REAR OUTPUT TERMINALS
PO
+S
+V
-V
-S
R309 11.8K 5% 5W
R301 A 200 5% 5W
OUTPUT VOLTAGE VDC
FOR WIRING OF POWER SUPPLY TO LOAD REFER TO POWER SUPPLY-TO-LOAD WIRING DIAGRAMS
DOTTED CONNECTIONS SHOWN ON TB1 INDICATE JUMPERS IN PLACE FOR LOCAL SENSING "2-WIRE CONNECTION"
RATING TABLE
LK345
AMBIENT TEMP | MAX LOAD
40°C 6.0A
50°C 5.2A
60°C 4.5A
71°C 4.0A
LK344
40°C 4.0A
50°C 3.5A
60°C 3.0A
71°C 2.5A
SCHEMATIC DIAGRAM REGULATED POWER SUPPLY 0-60 VOLTS
MODEL LK345
SCHEMATIC DIAGRAM REGULATED POWER SUPPLY 0-60 VOLTS
MODEL LK344
(SEE NOTE 10)
THIS SCHEMATIC APPLIES TO UNITS BEARING SERIAL NO PREFIX A
LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK
A Veeco SUBSIDIARY
C301 0.1µf 400V MYLAR
DS1
C315 0.068µf 400V MYLAR
S2
F1 3AG 20A SLO-BLO (15A FOR LK344)
S1 ON OFF
L301 88A-340
SCR301 FBP-00-011
R325 120
CR308
CR307
CR306
CR305
FBL-00-054 (4)
R327 39K 1W
R328 4 3W
C311 1.0µf 200V MYLAR
C306 3100µf 110V
C305 3100µf 110V
73.0 (13.2)
75.5 (15.7) FOR LK345
PRE-REGULATOR
F2 4AG 15A (10A ON LK344)
R324 1000 3% 15W
CONSTANT CURRENT PRE LOAD
C1 C2 C3
R308 5.6K 10% 2W FILM
FBN-L109 Q301
R307 56
C317 10µf 25V
R303 1K
R304 10K
FBM-Z116 CR302
R306 2.7K 10% 2W FILM
R305 22
0.80 (0.60)
0.65 (0.90)
FBL-00-054 CR301
CR304
CR303
C4
M2 0-10A (0-5A FOR LK344)
SERIES REGULATOR
2ND DRIVER
FBN-36487 Q302
R311 470
FBN-36487 Q303
R310 22
0 (1.0)
FBN-36487 Q304
FBN-36487 Q305 (NOTE 10)
R313B .047, 8W/ SECTION WW
R313A
R317B .047, 8 W/ SECTION WW (NOTE 10)
R312 3 3.5%
R314 33.5%
R316 33.5% (NOTE 10)
12.4 (12.0)
14.9 (14.5) FOR LK345
12.7 (12.7)
15.2 (15.2) FOR LK345
CR309
R319 1200
C5 C6 C7 C8
M1 0-60V
C303 470µf 80V
C302 0.1µf 200V MYLAR
C304 40µf 80V

SCB-342A

10 COMPONENT VALUES DESIGNATED HERE REFER TO MODEL LK340 ONLY.

COMP. DESIG.	VALUE
M1	0-20 V
M2	0-10 A
F2	15 A
C152	0.047 µf, 80 V
C154	0.015 µf, 200 V
C303	1900 µf, 30 V
C305	11,500 µf, 35 V
CR301	FBP-00-003
R171	220 K
R172	220 K
R313A	0.3
R313B	0.3
R327	3.9 K
R301B	3.8 K
Q171	FBN-LI13
Q302	FBN-36485
Q303	FBN-36485
Q304	FBN-36485
CR302	FBM-ZI13
R324	500, 3%, 7W

NOTES

1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED.
2. RESISTOR WATTAGE 1/2 WATT; RESISTORS ABOVE 2 WATTS ARE WIREWOUND UNLESS OTHERWISE NOTED.
3. RESISTOR TOLERANCES: COMPOSITION ±10%; WIREWOUND ±5% UNLESS OTHERWISE NOTED.
4. CAPACITOR TOLERANCES: ELECTROLYTIC, +0% -100%; TANTALUM, ±20%, PAPER, ±10%, CERAMIC, ±20%, MICA, ±20%, MYLAR, ±10%; UNLESS OTHERWISE NOTED.
5. SYMBOLS
   - INDICATES CLOCKWISE ROTATION OF SHAFT
   - INDICATES CONNECTION TO CHASSIS.
   - INDICATES ADJUSTMENT OR CALIBRATION CONTROL.
   - INDICATES ACTUAL UNIT MARKING.
   - INDICATES FRONT-PANEL MOUNTED COMPONENT.
   - * INDICATES FACTORY ADJUSTMENT; SEE INSTRUCTION MANUAL.
   - INDICATES TRANSFORMER LUG TERMINAL.
   - THIS DIODE IS LAMBDA PART NO. FBL-00-030; CAN BE REPLACED WITH STANDARD TYPE IN645 OR IN4002 DIODE UNLESS OTHERWISE NOTED.
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS:
   - A CONSTANT VOLTAGE
     - READ ITALICIZED NUMBERS FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT VOLTAGE OPERATION
     - INPUT: 120 VAC, 60 HZ
     - OUTPUT: MAX RATED VOLTAGE, OUTPUT CURRENT ZERO
   - B CONSTANT CURRENT
     - READ NUMBERS IN PARENTHESES FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT CURRENT OPERATION
     - INPUT: 120 VAC, 60 HZ, 30° AMBIENT
     - OUTPUT: 0 VOLTS, OUTPUT CURRENT MAX. RATED CURRENT (SHORT CIRCUIT)

   INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED.

   DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT VOLTMETER BETWEEN + DC (TERM. 6) AND INDICATED POINTS UNLESS OTHERWISE NOTED.
7. DESIGNATIONS ARE LAMBDA PART NUMBERS
8. ○ INDICATES TERMINAL LOCATED ON TERMINAL BOARD "C", OR PRINTED WIRING BOARDS "A", "B".
9. COAT BOTH SIDES OF MICA WASHER OR ANODIZED ALUMINUM WAFER WITH DOW CORNING NO. 340 SILICONE GREASE.

CAUTION
NOT AT CHASSIS GROUND POTENTIAL
DO NOT SHORT TO CHASSIS GROUND

NOTE 9
MICA INSULATING WASHER
CHASSIS GROUND

COLLECTOR (CASE) BASE EMITTER
TRANSISTOR, PIN VIEW

DUAL COMPLEMENTARY TRANSISTOR, PIN VIEW
Q251, Q252
Q211, Q212

RATING TABLE

LK342 AMBIENT TEMP	LK342 MAX LOAD
40°C	5.2 A
50°C	5.0 A
60°C	4.5 A
71°C	3.7 A
LK340	
40°C	8.0 A
50°C	7.0 A
60°C	6.1 A
71°C	4.9 A

SCHEMATIC DIAGRAM REGULATED POWER SUPPLY 0-36 VOLTS
MODEL LK342

SCHEMATIC DIAGRAM REGULATED POWER SUPPLY 0-20 VOLTS
MODEL LK340
(SEE NOTE 10)

FOR WIRING OF POWER SUPPLY TO LOAD REFER TO POWER SUPPLY-TO-LOAD WIRING DIAGRAMS

DOTTED CONNECTIONS SHOWN ON TB1 INDICATE JUMPERS IN PLACE FOR LOCAL SENSING "2-WIRE CONNECTION"

THIS SCHEMATIC APPLIES TO UNITS BEARING SERIAL NO PREFIX A

LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK
A Veeco SUBSIDIARY

SCB-343A

NOTES

1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED
2. RESISTOR WATTAGE 1/2 WATT; RESISTORS ABOVE 2 WATTS ARE WIREWOUND UNLESS OTHERWISE NOTED
3. RESISTOR TOLERANCES: COMPOSITION ±10%, WIREWOUND ±5% UNLESS OTHERWISE NOTED.
4. CAPACITOR TOLERANCES: ELECTROLYTIC, -10% +100%; TANTALUM, ±20%; PAPER, ±10%; CERAMIC, ±20%; MICA, ±20%; MYLAR, ±10%; UNLESS OTHERWISE NOTED
5. SYMBOLS
   - INDICATES CLOCKWISE ROTATION OF SHAFT.
   - INDICATES CONNECTION TO CHASSIS.
   - INDICATES ADJUSTMENT OR CALIBRATION CONTROL.
   - INDICATES ACTUAL UNIT MARKING.
   - INDICATES FRONT-PANEL MOUNTED COMPONENT.
   - * INDICATES FACTORY ADJUSTMENT; SEE INSTRUCTION MANUAL.
   - INDICATES TRANSFORMER LUG TERMINAL.
   - THIS DIODE IS LAMBDA PART NO. FBL-00-030; CAN BE REPLACED WITH STANDARD TYPE IN645 OR IN4002 DIODE UNLESS NOTED.
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS
   - A CONSTANT VOLTAGE
     READ ITALICIZED NUMBERS FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT VOLTAGE OPERATION.
     INPUT: 120 VAC, 60 HZ
     OUTPUT: MAX RATED VOLTAGE, OUTPUT CURRENT ZERO
   - B CONSTANT CURRENT
     READ NUMBERS IN PARENTHESES FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT CURRENT OPERATION
     INPUT: 120 VAC, 60 HZ, 30° AMBIENT
     OUTPUT: 0 VOLTS, OUTPUT CURRENT MAX RATED CURRENT (SHORT CIRCUIT)
   - INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED
   - DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT VOLTMETER BETWEEN +DC (TERM 6) AND INDICATED POINTS UNLESS OTHERWISE NOTED
7. DESIGNATIONS ARE LAMBDA PART NUMBERS
8. ○ INDICATES TERMINAL LOCATED ON TERMINAL BOARD "C", OR PRINTED WIRING BOARDS "A", "B".
9. COAT BOTH SIDES OF MICA WASHER OR ANODIZED ALUMINUM WAFER WITH DOW CORNING NO. 340 SILICONE GREASE

CAUTION
NOT AT CHASSIS GROUND POTENTIAL
DO NOT SHORT TO CHASSIS GROUND

NOTE 9
MICA INSULATING WASHER
CHASSIS GROUND
COLLECTOR (CASE)
BASE
EMITTER
TRANSISTOR, PIN VIEW

DUAL COMPLEMENTARY TRANSISTOR, PIN VIEW
Q251, Q252
Q211, Q212

T1
29.0 VAC (28.0 VAC)
40.0 VAC (39.0 VAC)
46.0 VAC (44.0 VAC)

PRE-REGULATOR CONTROL
RAMP C.C. SOURCE
SCR GATE TRIGGER
COMPARATOR
SERIES REGULATOR VOLTAGE SET
REFERENCE SOURCE
CURRENT CONTROL GENERATOR
CURRENT REGULATOR COMPARATOR
AMPLIFIER
VOLTAGE REGULATOR COMPARATOR
MAX OUTPUT VOLTAGE SET
OUTPUT REFERENCE
SERIES REGULATOR CONTROL
CURRENT LIMITER IDC
Q232 FBN-LI09 1ST DRIVER
2ND DRIVER
SERIES REGULATOR
PRE-REGULATOR
CONSTANT CURRENT PRE LOAD
FBL-00-054 CR301

TB1 REAR OUTPUT TERMINALS
PO
+S
+V
-V
-S

FOR WIRING OF POWER SUPPLY TO LOAD REFER TO POWER SUPPLY-TO-LOAD WIRING DIAGRAMS
DOTTED CONNECTIONS SHOWN ON TB1 INDICATE JUMPERS IN PLACE FOR LOCAL SENSING "2-WIRE CONNECTION"

OUTPUT VOLTAGE VDC

RATING TABLE	
AMBIENT TEMP	MAX LOAD
40°C	9.0 A
50°C	8.5 A
60°C	7.6 A
71°C	6.1 A

SCHEMATIC DIAGRAM
REGULATED POWER SUPPLY
0-36 VOLTS
MODEL LK343

LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK
A Veeco SUBSIDIARY

THIS SCHEMATIC APPLIES TO UNITS BEARING SERIAL NO. PREFIX A

SCB-345A

NOTES

1. RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED.
2. RESISTOR WATTAGE 1/2 WATT; RESISTORS ABOVE 2 WATTS ARE WIREWOUND UNLESS OTHERWISE NOTED.
3. RESISTOR TOLERANCES: COMPOSITION ±10%, WIREWOUND ±5% UNLESS OTHERWISE NOTED.
4. CAPACITOR TOLERANCES: ELECTROLYTIC, -10% +100%; TANTALUM, ±20%; PAPER, ±10%; CERAMIC, ±20%; MICA, ±20%; MYLAR, ±10%; UNLESS OTHERWISE NOTED.
5. SYMBOLS:
   - ⏚ INDICATES CLOCKWISE ROTATION OF SHAFT.
   - ⏚ INDICATES CONNECTION TO CHASSIS.
   - INDICATES ADJUSTMENT OR CALIBRATION CONTROL.
   - INDICATES ACTUAL UNIT MARKING.
   - INDICATES FRONT-PANEL MOUNTED COMPONENT.
   - INDICATES FACTORY ADJUSTMENT; SEE INSTRUCTION MANUAL.
   - ○ INDICATES TRANSFORMER LUG TERMINAL.
   - THIS DIODE IS LAMBDA PART NO. FBL-00-030; CAN BE REPLACED WITH STANDARD TYPE IN645 OR IN4002 DIODE UNLESS OTHERWISE NOTED.
6. CONDITIONS FOR CIRCUIT POINT VOLTAGE MEASUREMENTS.
   - A. CONSTANT VOLTAGE
     - READ ITALICIZED NUMBERS FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT VOLTAGE OPERATION.
     - INPUT: 120 VAC, 60 HZ
     - OUTPUT: MAX RATED VOLTAGE, OUTPUT CURRENT ZERO.
   - B. CONSTANT CURRENT
     - READ NUMBERS IN PARENTHESES FOR CIRCUIT POINT VOLTAGES WHILE IN CONSTANT CURRENT OPERATION.
     - INPUT: 120 VAC, 60 HZ, 30° AMBIENT.
     - OUTPUT: 0 VOLTS, OUTPUT CURRENT MAX. RATED CURRENT (SHORT CIRCUIT)
   - INDICATED VOLTAGES ARE TYPICAL VALUES AND ARE DC UNLESS OTHERWISE NOTED.
   - DC MEASUREMENTS TAKEN WITH 20,000 OHMS/VOLT VOLTMETER BETWEEN +DC(TERM 6) AND INDICATED POINTS UNLESS OTHERWISE NOTED.
7. DESIGNATIONS ARE LAMBDA PART NUMBERS.
8. ◯ INDICATES TERMINAL LOCATED ON TERMINAL BOARD "C", OR PRINTED WIRING BOARDS "A", "B".
9. COAT BOTH SIDES OF MICA WASHER OR ANODIZED ALUMINUM WAFER WITH DOW CORNING NO. 340 SILICONE GREASE.
10. THE FOLLOWING COMPONENT DESIGNATIONS ARE NOT USED ON LK344: R316; R317B; & Q305

CAUTION
NOT AT CHASSIS GROUND POTENTIAL
DO NOT SHORT TO CHASSIS GROUND

NOTE 9
MICA INSULATING WASHER
CHASSIS GROUND

COLLECTOR (CASE) — BASE — EMITTER
TRANSISTOR, PIN VIEW

DUAL COMPLEMENTARY TRANSISTOR, PIN VIEW
Q251, Q252
Q211, Q212

PRE-REGULATOR CONTROL
SERIES REGULATOR CONTROL
SERIES REGULATOR
PRE-REGULATOR
REFERENCE SOURCE
RAMP C.C. SOURCE
CURRENT CONTROL GENERATOR
CURRENT REGULATOR COMPARATOR
VOLTAGE REGULATOR COMPARATOR
AMPLIFIER
CONSTANT CURRENT PRE LOAD
OUTPUT REFERENCE
OUTPUT VOLTAGE VDC

TB1 REAR OUTPUT TERMINALS
PQ
+S
+V
-V
-S

FOR WIRING OF POWER SUPPLY TO LOAD REFER TO POWER SUPPLY-TO-LOAD WIRING DIAGRAMS

DOTTED CONNECTIONS SHOWN ON TB1 INDICATE JUMPERS IN PLACE FOR LOCAL SENSING "2-WIRE CONNECTION"

RATING TABLE	
LK345	
AMBIENT TEMP.	MAX LOAD
40°C	6.0 A
50°C	5.2 A
60°C	4.5 A
71°C	4.0 A
LK344	
40°C	4.0 A
50°C	3.5 A
60°C	3.0 A
71°C	2.5 A

SCHEMATIC DIAGRAM
REGULATED POWER SUPPLY
0-60 VOLTS
MODEL LK345

SCHEMATIC DIAGRAM
REGULATED POWER SUPPLY
0-60 VOLTS
MODEL LK344
(SEE NOTE 10)

THIS SCHEMATIC APPLIES TO UNITS BEARING SERIAL NO. PREFIX A

LAMBDA
ELECTRONICS CORP.
MELVILLE, L.I., NEW YORK
A Veeco SUBSIDIARY

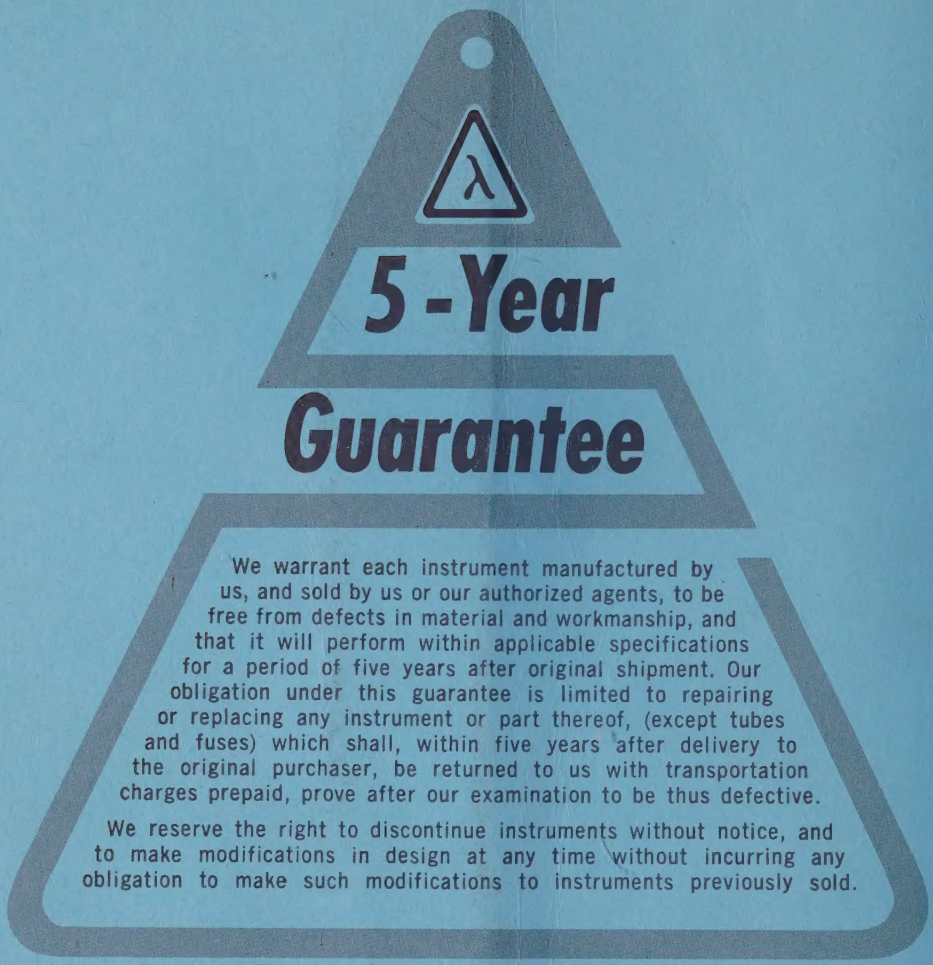
5 - Year
Guarantee
We warrant each instrument manufactured by us, and sold by us or our authorized agents, to be free from defects in material and workmanship, and that it will perform within applicable specifications for a period of five years after original shipment. Our obligation under this guarantee is limited to repairing or replacing any instrument or part thereof, (except tubes and fuses) which shall, within five years after delivery to the original purchaser, be returned to us with transportation charges prepaid, prove after our examination to be thus defective.
We reserve the right to discontinue instruments without notice, and to make modifications in design at any time without incurring any obligation to make such modifications to instruments previously sold.

LAMBDA ELECTRONICS CORP.
515 BROAD HOLLOW ROAD • MELVILLE, L. I., NEW YORK • 516 MYRTLE 4-4200

A Veeco SUBSIDIARY

MP MASTER
MA28702